

CENTRIFUGE OPERATION INSTRUCTIONS

CLEAN



SWITCH ON



CHEK BALANCE



SET TIME MTS RPM



SWITCH OFF THE CENTRIFUGE

