

c111
admin

V4.3.0.1835

20421

10.02.2024 6:52 PM

Abs. Air/Water Calibration:

Abs. Air/Water Calibration.

Cuvette segment is moved to handling position 1.

Insert an empty cuvette segment, then press <OK>.

Cuvette segment is moved to handling position 2.

Insert an empty cuvette segment, close the cover, then press <OK>.

Starting the calibration.

Waiting for completion.

Maintenance action complete.

Wavelength	H2O	H2O cuvette
340	-0.0003	0.0835
378	-0.0003	0.0778
409	0.0006	0.0759
449	0.0026	0.0764
480	0.0044	0.0772
512	0.0059	0.0782
520	0.0062	0.0783
552	0.0075	0.0792
583	0.0084	0.0802
629	0.0095	0.0812
652	0.0099	0.0817
659	0.0101	0.0819

Outlier statistics:

Air : 0

Water : 0

Diff : 0

Total : 0

Press <OK> to use these values.

Then press <Cuvettes> and exchange the two segments.